

M/R III Light Module Lens Retrieval

1. Detached remaining lenses off the Spindle arm Suction cups.
2. Turn off the power to the machine and disconnect power cord from the electrical outlet. Open the back doors of the M/R III.
3. Remove the two pan head Allen screws that hold the UV Bulb in the carriage and remove the UV Bulb module buy gently pulling on the handle.
4. Allow the UV Bulb Module to cool for a minimum of 15 minutes or until the UV Bulb Module is room temperature and remove the lens from the lamp area.
5. Check for lens debris and if clear, return UV Bulb to carriage and return to machine operations. If lens debris is present and cannot be removed replace UV Bulb Module with a new one and return to machine operation.

UV Light Module Replacement

1. Turn off the power to the machine and disconnect power cord from the electrical outlet. Open the back doors of the M/R III
2. Remove the two pan head Allen screws that hold the UV Bulb in the carriage and remove the UV Bulb module buy gently pulling on the handle.
3. Replace with UV Bulb to carriage and return to machine operations.
4. The Lamp is a self contained module with no user service parts. A handle and an hour meter are located on the module.

The UV Lamp should be replaced every 1,000 hours.

5. Return the Lamp module to Ultra Optics for a Core credit on your account.