


SPINDLE RPM SCREEN

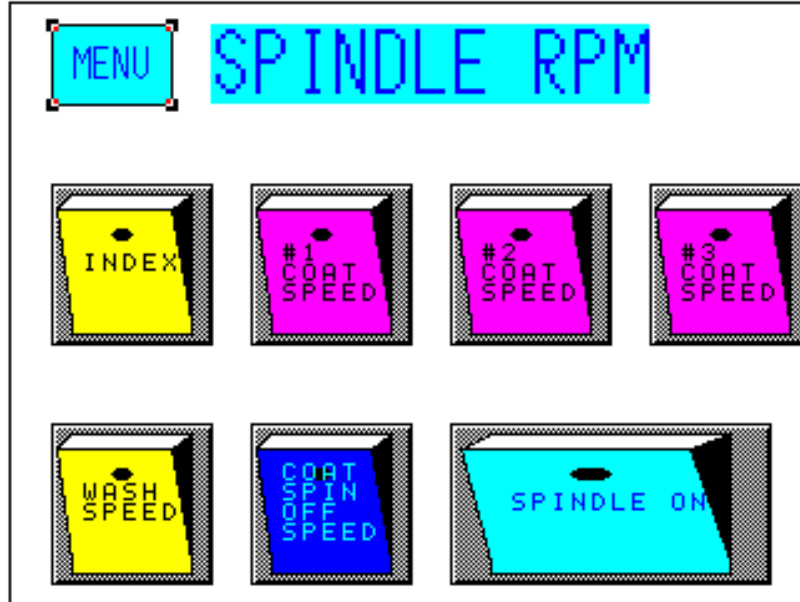

THIS SCREEN IS TO MEASURE INDIVIDUAL SPINDLE SPEEDS. NOTE : THAT ALL SPINDLES ARE NUMBERED. LOCATE SPINDLES 1,2,OR 3 BY PRESSING THE INDEX BUTTON.

SPINDLE ON BUTTON: PRESSING THIS BUTTON ALLOWS YOU TO CHOOSE SPINDLES 1,2 OR 3 TO TEST.

#1 COAT SPEED BUTTON: PRESSING THIS BUTTON ALLOWS YOU TO ADJUST COAT SPEEDS FOR SPINDLE #1 WITH COAT POTENTIOMETER.

COAT SPIN OFF SPEED BUTTON: (WITH COAT SPEED BUTTON ON) PRESSING THIS BUTTON ALLOWS YOU TO ADJUST COAT SPIN OFF SPEEDS WITH COAT SPIN OFF POTENTIOMETER.

WASH SPEED BUTTON: (WITH COAT SPEED BUTTON ON) PRESSING THIS BUTTON ALLOWS YOU TO ADJUST WASH SPEEDS WITH WASH SPEED POTENTIOMETER.

REPEAT STEPS FOR **#2 COAT SPEED BUTTON** (SPINDLE #2).

REPEAT STEPS FOR **#3 COAT SPEED BUTTON** (SPINDLE #3)

MENU BUTTON: PRESSING THIS BUTTON WILL RETURN YOU TO SYSTEM DETAIL SCREEN.