


Mini II Coating System Height Adjustment

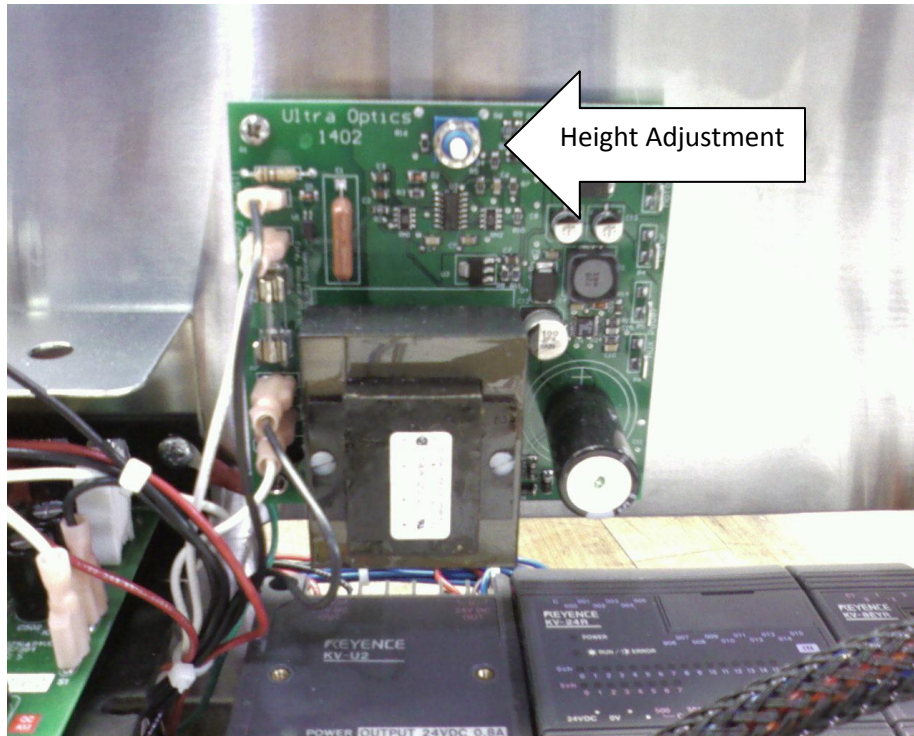

- To raise the coating level turn dial clockwise
- To lower the coating level turn counter clockwise