

# *Ultra Rx*

## *Operation Tips*

### **A) To adjust coating height:**

- 1) Go into Machine Set-Up
- 2) Press coating on/off
- 3) Adjust height flow to top of coating bowl using “coating pump” pot  
~Clockwise to increase  
~Counter clockwise to decrease

### **B) To prime high pressure wash:**

- 1) Go into Machine Set-up
- 2) Press vacuum
- 3) Chuck lens up on wash spindle
- 4) Press “wash prime” and “Dump Valve” allow to prime for 45 seconds
- 5) Release Dump Valve to ensure constant beat (like a heartbeat)  
If wash prime has not been achieved allow to run with Dump Valve on for another 45 seconds
- 6) After your wash is primed press the Dump Valve again and allow to run for 20 seconds
- 7) Press Wash Prime first than Dump Valve, release vacuum and remove lens

### **C) To ensure lens is dry before it is coated:**

- 1) Go into single lens
- 2) Press on/off
- 3) Prepare lens and chuck up onto wash spindle, allow to wash and dry
- 4) When spindles start to come up press “E-Stop”
- 5) Release lens and ensure backside is dry. If not dry, ensure wash tip is clean and free of debris. Then repeat priming high pressure wash again.

### **D) To replace Coating Filter:**

- 1) Disconnect the nut on the fitting at the top of your coating filter.
- 2) Insert loose nut and tubing into a clean container.
- 3) Press coating on/off button and the coating will pump out of the loose nut and tubing into the clean container.
- 4) When the reservoir is empty, press coating on/off button to turn off coating Pump.
- 5) Disconnect nut on the elbow on bottom of filter. Drain coating out of old filter into clean container.
- 6) Place Teflon tape on the new coating filters before reassembling.
- 7) Pour coating back into coating bowl chamber and re-prime system.