


## MRIII UV-Light Wire Harness Installation Instructions

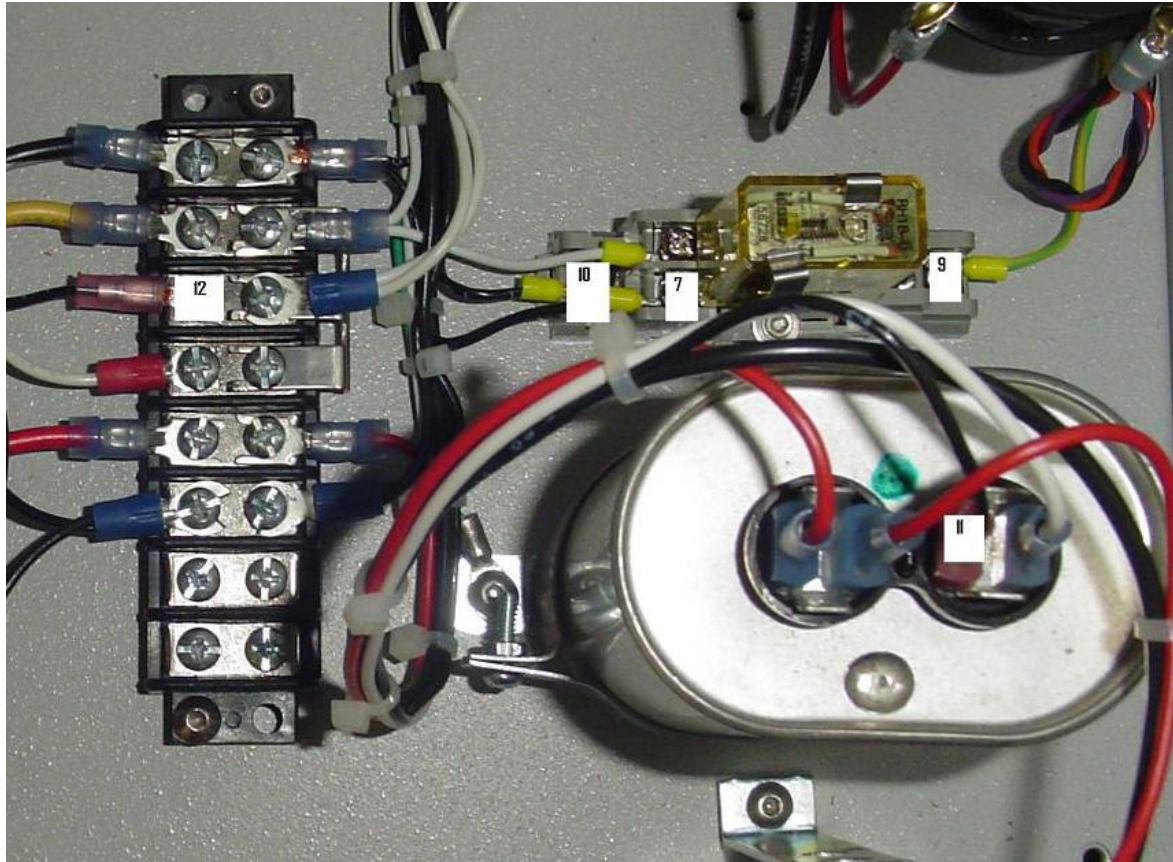


Lamp Receptacle

#8	#10	#12
15 PIN	RELAY	Terminal Block
#7	#9	#11
RELAY	RELAY	Capacitor

**#7 BLACK goes to relay block; #9 BLACK goes to relay block; #11 BLACK goes to the Capacitor**

**#8 BLK goes to 15 Pin Connector; #10 GRN/YLW goes to relay block; #12 BLK goes to the terminal block**

**CONTINUED ON BACK**

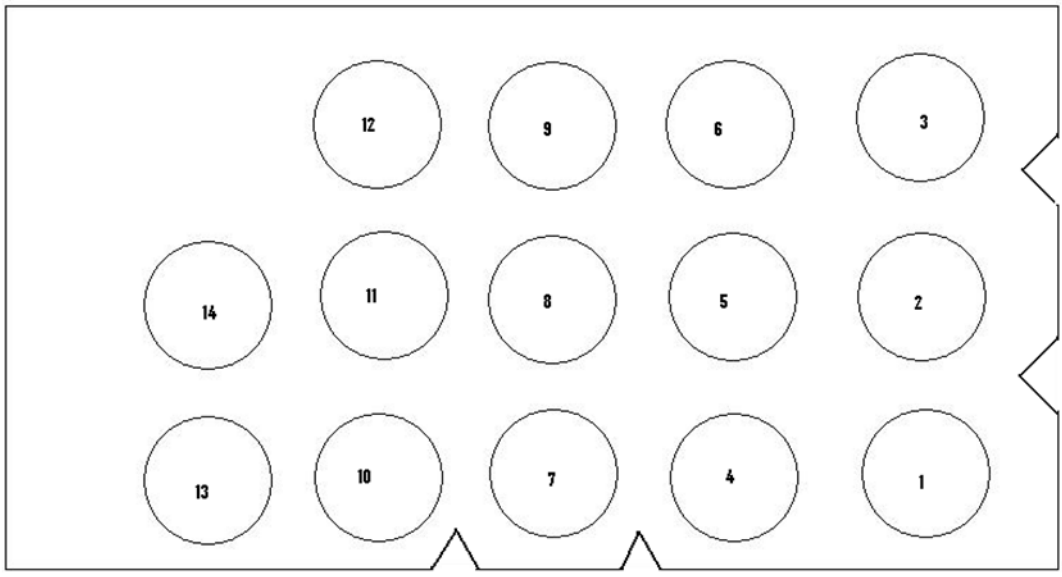

**15 Pin Connector (male)**

EMPTY	12 GREY	9 RED	6 BLACK	3 BROWN
14 BLACK	11 GREY	8 WHITE	5 BLACK	2 BLACK
13 RED	10 GREEN	7 RED	4 YELLOW	1 BLACK